



BENGERT SCOPE MOUNT

INSTRUCTIONS FOR GUNSMITH

Drill and tap holes in gun barrel or receiver if not already drilled for screws attaching the scope mount base. Place base on gun and secure in position. Insert scope in scope ring and tighten ring screws (No. 1). Place scope ring containing scope on base and secure in place temporarily by tightening demounting screw (No. 4). Sight in scope to zero. When it is accurate, adjust alignment screws (No. 2) to slip fit (so that scope ring may be removed from base by lifting straight up but has no side play). Then lock alignment screws by tightening lock screws (No. 3) to hold scope ring in a permanent position. Then tighten demounting screw (No. 4). The scope is now ready for use.

INSTRUCTIONS FOR SHOOTER

When you want to remove the scope, just loosen demounting screw (No. 4) and lift scope ring straight up. Do not remove alignment screws (No. 2) at any time for alignment may be altered and accuracy impaired.

ED BENGERT, Gunsmith

c/o ELLIOTT ARMS CO. 1508 GRAND AVE., K. C., MO.